 
TIGHT JOINT CONNECTOR

Installation Instructions











Install ball tightener

NOTE!


Align hole on ball tightener with hole on mating edge of worktop.

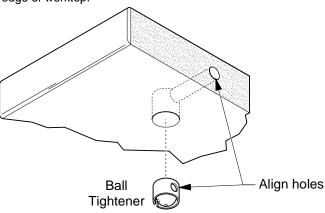

Install connecting rod

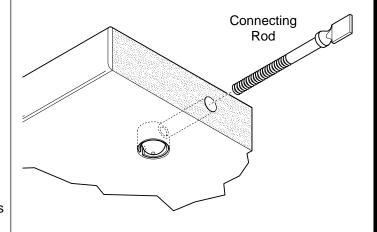


Slide opposite worktop over connecting rod

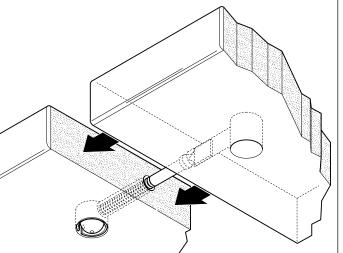

Install double slotted retainer and tighten

NOTE!

Before tightening joint connector use plywood and C-clamp to keep worksurfaces flush. Shoulder of connecting rod should be inside the double slotted retaining ring.

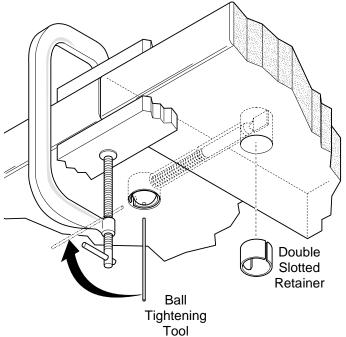

CUSTOMER SERVICE PHONE: 1-800-426-8562

E.C.O. No: 305-009 Page: 1 OF 1 Part No: 7021-6905 Rev: B