VANCOUVER®

 
3 Circuit Power Distribution Assembly Installation Instructions


Tools Required 5/16

WARNING: Do not electrically interconnect modular power distribution systems powered from two different power feed units. This poses a SHOCK HAZARD to service personnel and will cause RISK OF FIRE due to excessive circulating currents.

WARNING: All circuit power MUST REMAIN DISCONNECTED during any installation or removal of electrical components and raceway covers to avoid SHOCK HAZARDS.

NOTE: Connections of this modular power distribution component MUST be done by a licensed electrician, who must control the size and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all applicable building and electrical code requirements.



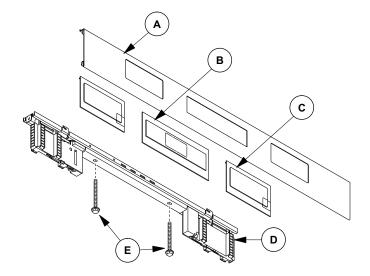

CUSTOMER SERVICE PHONE: 1-800-426-8562

