


HAWORTH



Atwell

Service Instructions


Arm Cap Replacement

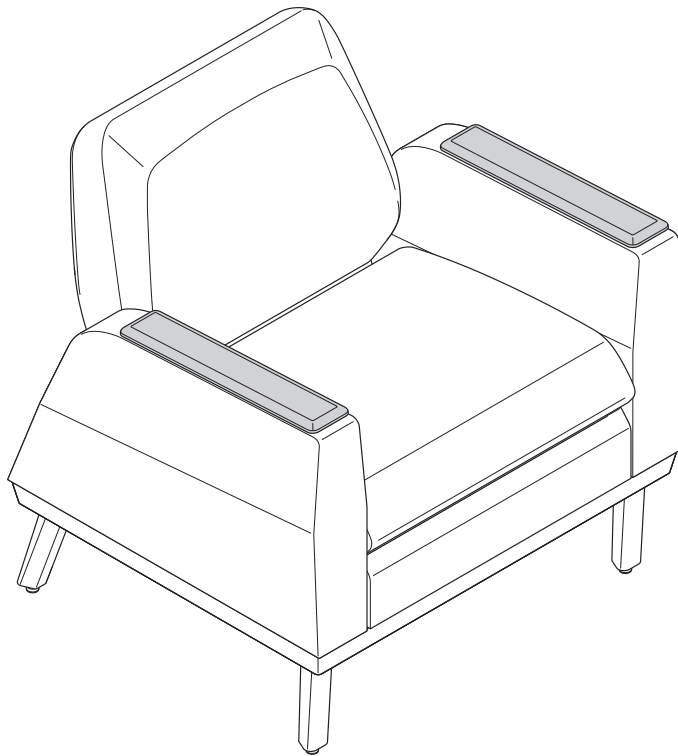


Tools Required

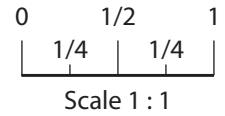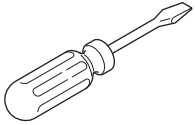

Parts

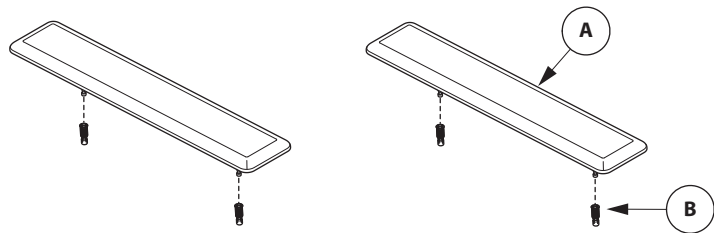

1 Remove existing arm caps (C).

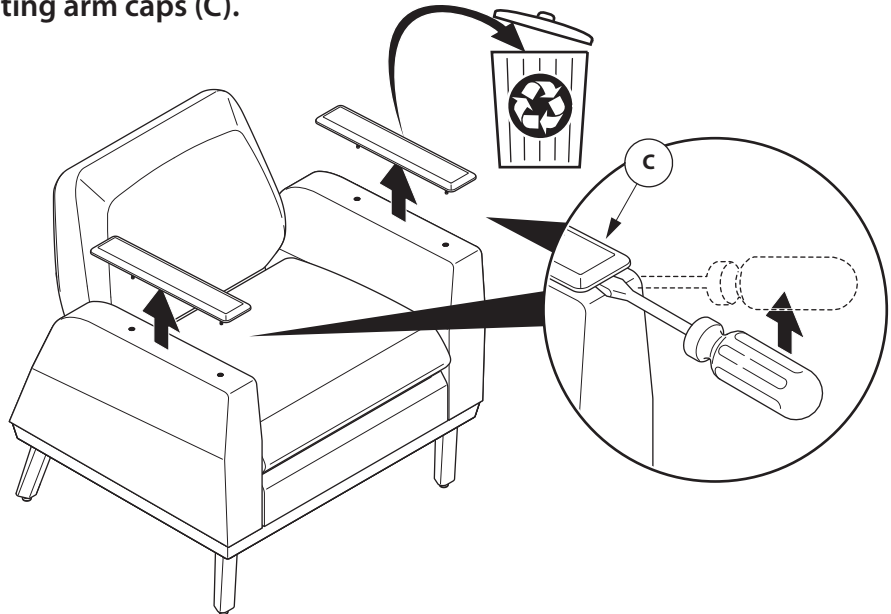

2 Install new arm caps (A).

