

Drill holes into Intuity rail for future use. Hole locations are described below.

42" Screen - Drill a 9/32" hole 10-7/16" in from each side of the rail

48" Screen - Drill a 9/32 " hole 11-15/16" in from each side of the rail

60" Screen - Drill a 9/32" hole 14-15/16" in from each side of the rail

72" Screen - Drill a 9/32" hole 17-15/16" in from each side of the rail

# **Hole Locations**

## 42" Screen



#### 48" Screen



## 60" Screen



#### 72" Screen



**CUSTOMER SERVICE PHONE: 1-800-426-8562** 





