



**Assembly Instructions** 

Congratulations on your purchase of Wall Mounted Tiles and Metal Shelf

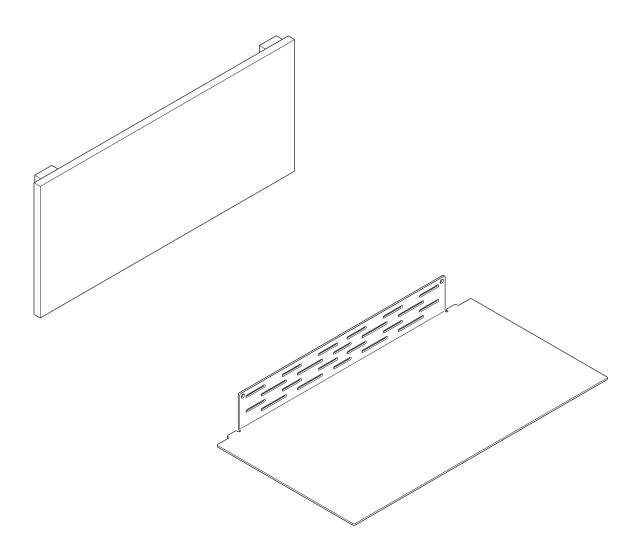

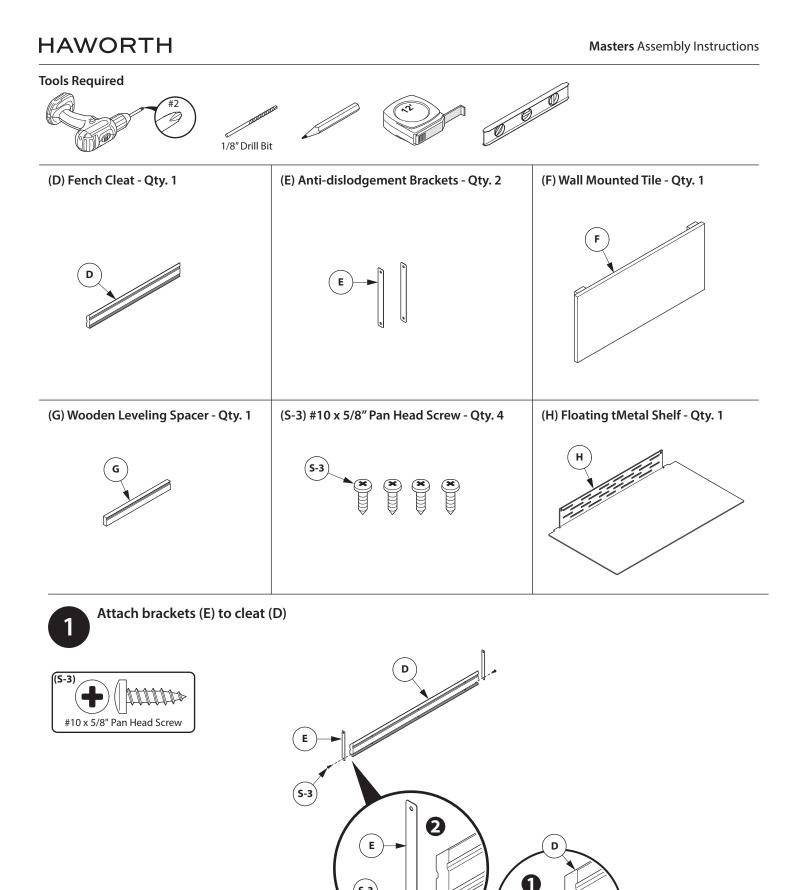

S-3

1/8"



#### Install cleats (D) align bottom of cleats on marked lines. Install wall tile (F) as shown.


NOTE: Install screws every 8 inches.


NOTE: Due to varying wall construction, fasteners are not included and must be field supplied.

#### **Specific Instructions for Wall Frame Construction**

- A. Wall with Wood Stud Framing or 3/4" Plywood Surfaces: Cleats must be attached to either wood studs in wall or 3/4" thick plywood securely attached to studs. Attach the cleats using #10 x 2-1/2" truss head screws. Use longer screws if required to securely anchor the cleats to the wood studs.
- Wall with Gypsum Board, Sheet Rock or Wall Board with В. Metal Stud Framing:


Cleats must be attached to metal studs. Use either 2" #10 sheet metal screws or 2" #10-24 TEKS self-drilling screws.

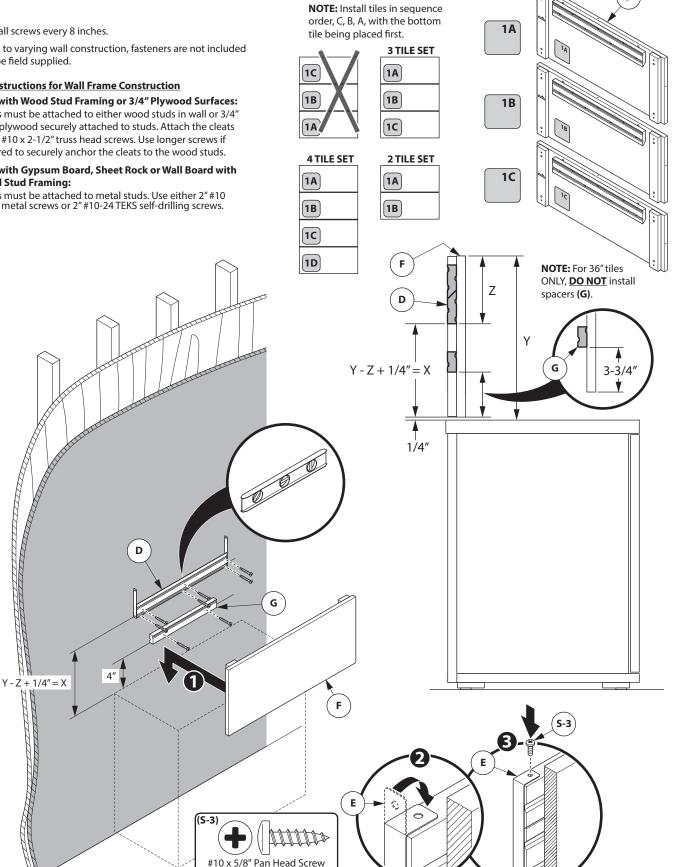


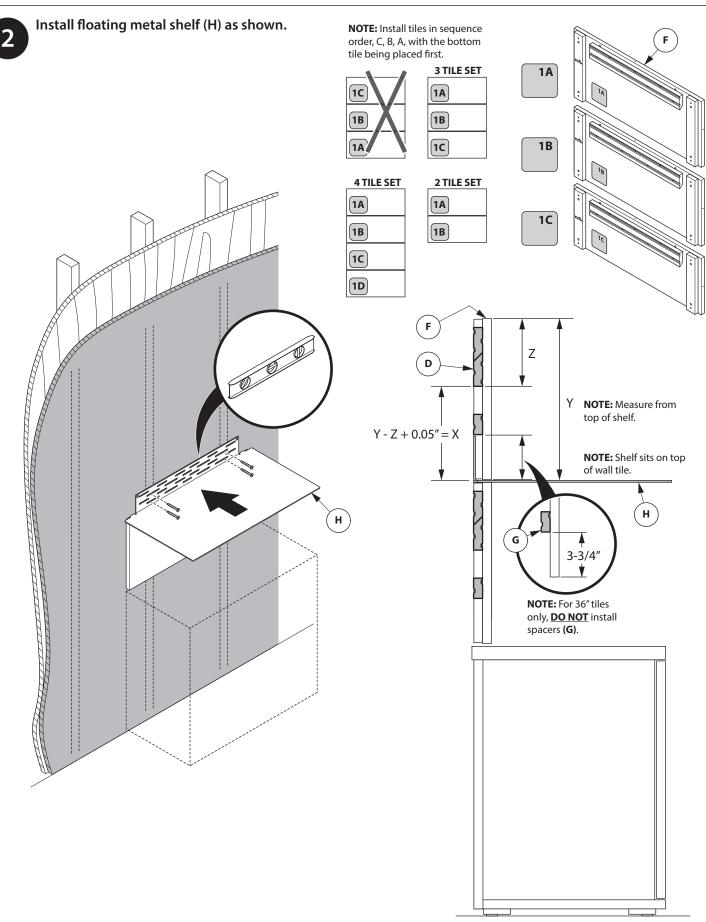


#### WALL ATTACHMENT OPTIONS

**NOTE:** Due to varying wall construction, fasteners are not included and must be field supplied.

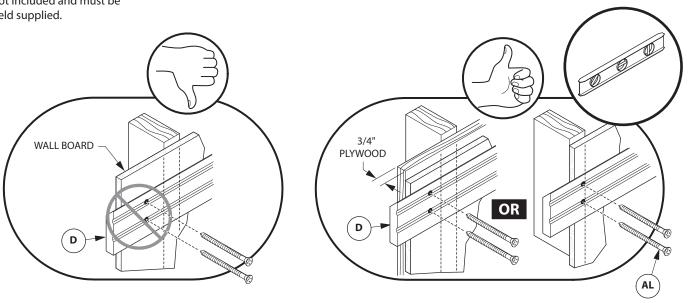

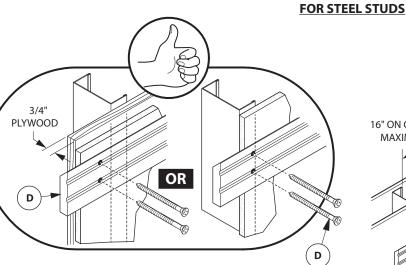

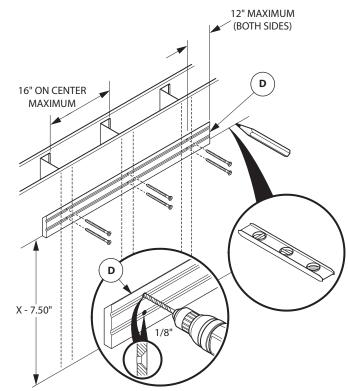

#### WALL TRACK ATTACHMENT OPTIONS

